



Sewing Machine Pedal Stop



Materials needed:

2 Pieces of Non-Slip shelf Liner

7" X 9" – *size may vary

2 1/2" binding strip

Piece of fabric

9" X 11" – *size may vary

Scrap of batting

6" X 9" – *size may vary


** adjust size to fit YOUR sewing machine foot, larger or smaller, as needed*



- 1 Check to see which sides of your shelf liner are smoother (it may vary between brands). Put those two sides together and pin to hold them in place with a piece of paper behind them so that they will not stick to your machine bed.



- 2 Take your 2 1/2" binding and sew around the pieces of shelf liner.

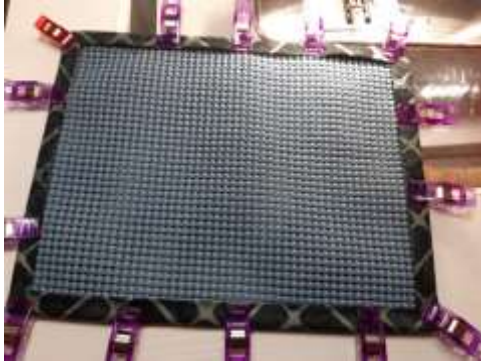


- 3 Tear off the paper, saving the center portion for next step.

Turn binding to other side and pin or clip binding in place.



- 4 Place paper under the center section of your piece to help it glide over your machine bed. Stitch close to folded edge of binding.

Set aside.

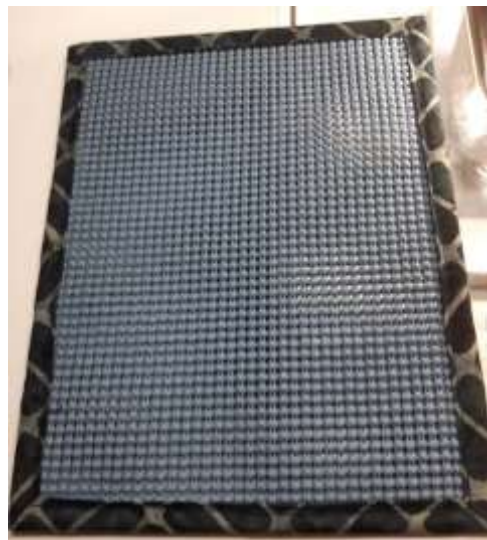



- 5** Place scrap of batting on wrong side of fabric piece. Center along one of the short edges.

Roll the two pieces, from that short edge, keeping the batting inside.



- 6** Fold raw edge in, giving a finished edge. Clip or pin to close the roll. Sew this long edge closed, hand sewing is recommended.



- 7** Fold ends under and sew to the Sewing Machine Foot Pedal foundation from step 4. Hand sewing is recommended.



Don't worry if your sewing is not the neatest, this is a project to use under your sewing machine foot. The most important part is that it will hold your machine foot in place!

Note: it will grip more than the floor and your pedal, it will collect stray threads, as well!

Thanks to so-sew-easy.com for the tutorial inspiration.